DISCLAIMER

Knight Inc. does not accept responsibility for the mishandling, misuse, or non-performance of the described items when used for purposes other than those specified in the instructions. For hazardous materials information consult label, MSDS, or Knight Inc.

WARRANTY

All Knight controls and pump systems are warranted against defects in material and workmanship for a period of ONE year. All electronic control boards have a TWO year warranty. Warranty applies only to the replacement or repair of such parts when returned to factory with a Knight Return Authorization (KRA) number, freight prepaid, and found to be defective upon factory authorized inspection. Bearings and pump seals or rubber and synthetic rubber parts such as "O" rings, diaphragms, squeeze tubing, and gaskets are considered expendable and are not covered under warranty. Warranty does not cover liability resulting from performance of this equipment nor the labor to replace this equipment. Product abuse or misuse voids warranty.

World Headquarters: 20531 Crescent Bay Drive, Lake Forest, CA 92630 USA TEL: (949) 595-4800, FAX: (949) 595-4801
Atlanta Branch: 8111 Technology Drive, Covington, GA 30014 USA TEL: (770) 787-9400, FAX: (7770) 787-1555
Toronto Branch: 2880 Argentia Road, Unit 6, Mississauga, Ontario, Canada LSN 7X8 TEL: (905) 542-2333, FAX: (905) 542-1536
London Branch: #15 Brunel Centre, Newton Rd, Crawley, West Sussex, UK RH102UB TEL: (44) 1293-615570, FAX: (44) 1293-615585
Sydney Branch: Unit 28, 317-321 Woodpark Road, Smithfield NSW, Australia 2164 TEL: 61-29-725-2588, FAX: 61-29-725-2025
Amsterdam Branch: Marssteden 68, 7547 TD Enschede, The Netherlands TEL: 31-53-428-58-00, FAX: 31-53-428-58-09



SLC/SRD RELAY KIT INSTRUCTION MANUAL

INTRODUCTION

The Relay Retro-Fit kit is designed to be mounted with either the Solid Laundry Converter or the Solid Rinse Dispenser. It's function is to extend the life of the float switch inside the system.

INSTALLATION PROCEDURES

Solid Laundry Converter

Mount the relay on the case between the 24v input connector and the solenoid valve. Following the wiring schematic overleaf connect the relay to the appropriate points. Once installed the unit will continue to function as normal.

Solid Rinse Dispenser

Remove the cover from over the solenoid. Following the wiring schematic overleaf connect the relay to the appropriate points. Once installed the unit will continue to function as normal.

Page 4 0900870 Rev: REL (12/99) 0900870 Rev: REL (12/99) Page 1



