



UDP-100S / UPP-100S Instruction Manual

0901017 Rev:C (05/01) Page 1 of 8

TABLE OF CONTENTS

UDP-100S Installation	2
UDP-100S Pump Connections	2
UDP-100S Operation	2
UPP-100S Installatiion	3
UPP-100S Pump Connections	3
UPP-100S operation	3
Wiring Diagram	9
Assembly Diagram	10
Warranty Information	6
Knight Locations	6



CAUTION: The UDP /UPP Series system has high voltage connected to the transformeralwaysdisconnect main power when servicing the unit.

Page 2 of 8 0901017 Rev:C (05/01)

UDP-100S INSTALLATION

- (1) Mount the unit on a wall in a convenient location near the dishwasher, the DataPlus unit that will control the UDP-100S, and not more than three feet from the final rinse line. Ensure that the distance from the bottom of the UDP-1000S to the top of the chemical container will be at least 12". A mounting bracket is available for mounting the unit on top of the dishwasher if desired. NOTE: Mounting the unit on the side, on the back, or on the vents of the dishwasher may cause thermal overload and damage or hinder the performance of the unit. Do NOT mount the unit in the direct path of steam. This can short circuit and permanently damage the unit.
- (2) Remove power from the DataPlus unit that will control the UDP-100S.
- (3) Install the 4-conductor cable from the UDP-100S to the DataPlus circuit board (see installation drawing).

UDP-100S PUMP CONNECTIONS

- (1) Install 1/4" tube injection fitting into the side or bottom of the dishwasher rinse line between the rinse solenoid valves and the rinse jets. Drill a 11/32" hole and tap to 1/8" NPT. Use of a saddle clamp may be desired on copper rinse line for better support. Saddle clamps can be used if required.
- (2) Install 1/4" O.D. poly tubing between the discharge (right) tube side of the peristaltic pump and the injection fitting using the 1/4" poly compression nuts.
- (3) Install 1/4" O.D. poly tubing between the suction (left) tube side and the pickup tube provided. Be sure to draw tubing through the end of the pickup tube.

UDP-100S OPERATION

Control of the pump will be performed by the DataPlus unit that the pump is connected to — refer to the DataPlus Programming Manual for detailed implementation instructions of the UDP-100S.

As a reminder, remember to remove the jumper over the LOW SAN terminals on the DataPlus board or the low level lights and alarms will NOT activate.

0901017 Rev:C (05/01) Page 3 of 8

UPP-100S INSTALLATION

- (1) Mount the unit on a wall in a convenient location near the dishwasher, the device that will control the UPP-100S, and not more than three feet from the final rinse line. A mounting bracket is available for mounting the unit on top of the dishwasher if desired. NOTE: Mounting the unit on the side, on the back, or on the vents of the dishwasher may cause thermal overload and damage or hinder the performance of the unit. Do NOT mount the unit in the direct path of steam. This can short circuit and permanently damage the unit.
- (2) Check the voltage of the device that will control the UPP-100S.; the variable speed pump motor requires a 0-24 VDC source. Application of incorrect voltage will permanently damage the unit and is not covered under warranty.
- (3) Remove power from the device that will control the UPP-100S.
- (4) Connect the motor leads to the device that will be controlling the UPP-100S.

UPP-100S PUMP CONNECTIONS


- (1) Install 1/4" tube injection fitting into the side or bottom of the dishwasher rinse line between the rinse solenoid valves and the rinse jets. Drill a 11/32" hole and tap to 1/8" NPT. Use of a saddle clamp may be desired on copper rinse line for better support. Saddle clamps can be used if required.
- (2) Install 1/4" O.D. poly tubing between the discharge (right) tube side of the peristaltic pump and the injection fitting using the 1/4" poly compression nuts.
- (3) Install 1/4" O.D. poly tubing between the suction (left) tube side and the pickup tube provided. Be sure to draw tubing through the end of the pickup tube.


UPP-100S OPERATION

Control of the pump will be performed by the device that the pump is connected to — refer to the instructions provided for the device for detailed implementation instructions of the UPP-100S.

Page 4 of 8 0901017 Rev:C (05/01)


WIRING DIAGRAM UDP-100S

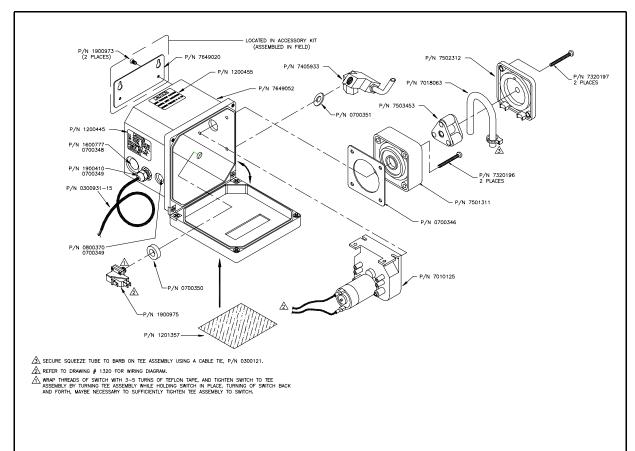

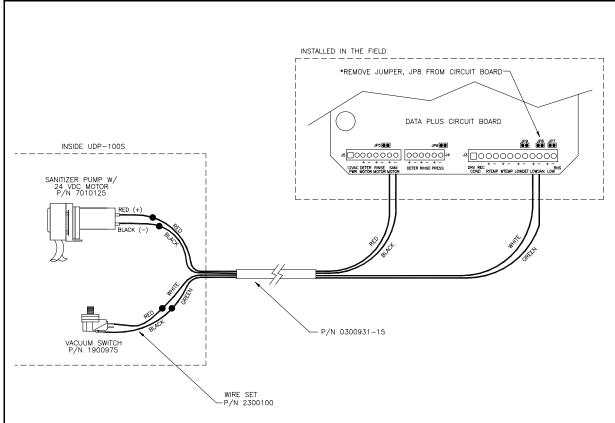

0901017 Rev:C (05/01) Page 5 of 8

WIRING DIAGRAM UPP-100S

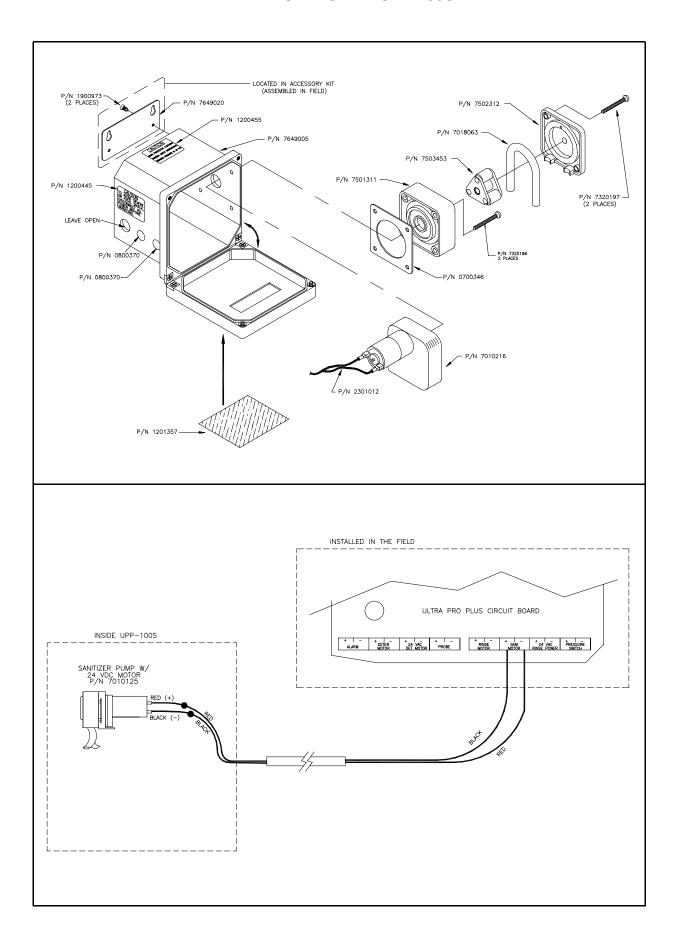

Page 6 of 8 0901017 Rev:C (05/01)

NOTE

0901017 Rev:C (05/01) Page 7 of 8

DISCLAIMER

Knight Inc. does not accept responsibility for the mishandling, misuse, or non-performance of the described items when used for purposes other than those specified in the instructions. For hazardous materials information consult label, MSDS, or Knight Inc.

WARRANTY

All Knight controls and pump systems are warranted against defects in material and workmanship for a period of ONE year. All electronic control boards have a TWO year warranty. Warranty applies only to the replacement or repair of such parts when returned to factory with a Knight Return Authorization (KRA) number, freight prepaid, and found to be defective upon factory authorized inspection. Bearings and pump seals or rubber and synthetic rubber parts such as "O" rings, diaphragms, squeeze tubing, and gaskets are considered expendable and are not covered under warranty. Warranty does not cover liability resulting from performance of this equipment nor the labor to replace this equipment. Product abuse or misuse voids warranty.

KNIGHT INC. A Unit of IDEX Corporation

World Headquarters: 20531 Crescent Bay Dr. Lake Forest CA 92630-8825 USA TEL: (949) 595-4800 FAX: (949) 595-4801

Atlanta Branch: 8111 Technology Dr. NE Covington, GA 30014 USA TEL: (770) 787-9400 FAX: (770) 787-1155

Toronto Branch: 2880 Argentia Road, Unit 6 Mississauga, Ontario L5N 7X8 Canada TEL: (905) 542-2333 FAX: (905) 542-1536

London Branch: #15 Brunel Centre Newton Road, Crawley West Sussex UK RH102UB TEL: (44) 1293-615570 FAX: (44) 1293-615585

Sydney Branch: Unit 28, 317-321 Woodpark Rd., Smithfield NSW Australia 2164 TEL: 61-29-725-2588 FAX: 61-29-725-2025

Amsterdam Branch: Marssteden 68 7547 TD Enschede The Netherlands TEL: 31-53-428-58-00 FAX: 31-53-428-58-09