



LOOSEN RETAINING SCREWS ON THE FRONT COVER

-SWITCH CONTACTS -

WIRE DIAGRAM

BLACK

JIIHM

- ♥ ♥ ♥ ♥ REMOVE COVER FROM ASSEMBLY
 - PUNCH OUT APPROPRIATE CUTOUT FROM CASE
- .DOSEN RETAINING NUT ON THE STRAIN RELIEF
- 5) FEED THE WIRE THROUGH STRAIN RELIEF, WASHER AND CASE
- 6) FEED STRAIN RELIEF BODY THROUGH CUTOUT ON THE CASE
- IGHTEN NUT TO STRAIN RELIEF BODY
- WIRE PER WIRING DIAGRAM
- 9 8 MOUNT CASE TO WALL USING APPROPRIATE MOUINTING HARDWARE SUPPLIED
- PLACE FRONT COVER BACK ONTO CASE
- IGHTEN RETAINING SCREWS