

# KMP-DR (7865454) OPERATION & PROGRAMMING GUIDE



Front View

Four digit LED display

Select button

Enter button

Power switch OFF/ON

Single pump with 2 2-lead  
signal input cables  
24 -240 VAC input




Bottom View

Summary Table

	P---	Password to Access the programming menu Setting from factory is set to 000
	1	<b>V Rinse speed (10 – 100%)</b> Set pump <a href="#">speed to run when the RINSE signal is activated</a>
	2	<b>T Rinse Time (0 – 999 sec)</b> Set Rinse time. A 000 setting, pump will run as long as the Rinse signal is active
	3	<b>Speed enable/disable in On line mode (ON—OFF)</b> ON means that while the signal is active and the pump is running you will be able to change the speed of the pump while is running.
	0	Password setting
	Hld	Exit menu saving settings
	ESC	Exit menu without saving settings

# KMP-DR (7865454) OPERATION & PROGRAMMING GUIDE

## OPERATION

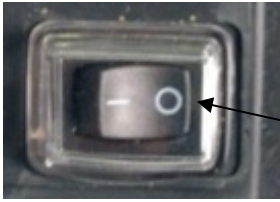

1. Connect signal input 100 to 240VAC
2. RINSE signal to BLUE and BROWN wires
3. Turn main power switch to OFF (0)
4. Turn RINSE signal ON to 100-240VAC

## PROGRAMMING



6. Display will show Sby



7. Press and hold TIME/ENTER button for 5 seconds display will show P— (Password Screen)



8. Factory Passcode is 000. Press TIME/ENTER button four times until display shows MENU 1 100 (none flashing)



9. To change setting press the TIME/ENTER button once, the 1 will flash.



10. While 1 is flashing change number by pressing Dosing button.



11. While 1 is flashing change number by pressing Dosing button.



12. Hit TIME/ENTER button to enter value and move to the next number. Repeat steps 10 through 12 to change the rest of the digits



13. Press the DOSING button once to change to MENU 2 100

14. Repeat steps 9 through 13 to change menu 1 through 3

## KMP-DR (7865454) OPERATION & PROGRAMMING GUIDE

### PASSWORD SETTING



15. MENU 0 000, press TIME/ENTER once, display will flash



16. While digit is flashing, change number by pressing Dosing button



17. Press TIME/ENTER to enter value and move to the next number.

### EXITING MENUS



18. Press DOSING button to change to MENU Hld



19. MENU Hld, press TIME/ENTER to exit programming or DOSING to advance to next MENU (Note: Exiting Hld MENU will save your changes)



20. MENU ESC, press TIME/ENTER to exit programming. Display will Sby (Note: Exiting ESC MENU will not save your changes)