




KP1H EXTENSION PLATE INSTRUCTION SHEET

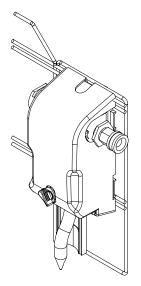


- 1 Remove (2) screws and remove cover
- 2. Remove pick up tubes

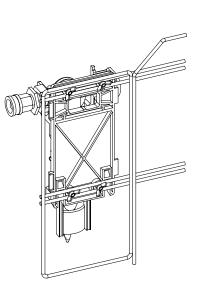

- 3. Remove 4 wing nuts from back of system
- 4. Mount the extension plate in place of the KP1H secure using the wing nuts from step 3.

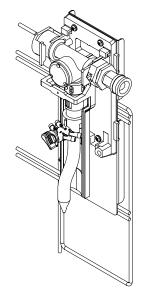

5. Mount the KP1H system to the extension plate using the 4 screws supplied in the kit.

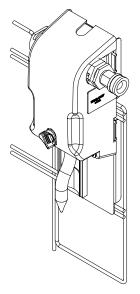

 Rout the pick up tubes thru the openings in the extension plate. Attach them to the Dial-4 valve and replace the cover.

DISCLAIMER

Knight Inc. does not accept responsibility for the mishandling, misuse, or non-performance of the described items when used for purposes other than those specified in the instructions. For hazardous materials information consult label, MSDS, or Knight Inc.

WARRANTY

All Knight controls and pump systems are warranted against defects in material and workmanship for a period of ONE year. All electronic control boards have a TWO year warranty. Warranty applies only to the replacement or repair of such parts when returned to factory with a Knight Return Authorization (KRA) number, freight prepaid, and found to be defective upon factory authorized inspection. Bearings and pump seals or rubber and synthetic rubber parts such as "O" rings, diaphragms, squeeze tubing, and gaskets are considered expendable and are not covered under warranty. Warranty does not cover liability resulting from performance of this equipment nor the labor to replace this equipment. Product abuse or misuse voids warranty.

KNIGHT INC. A Unit of IDEX Corporation World Headquarters: 20531 Crescent Bay Drive. Lake Forest: CA 92630-8825 (USA) TEL: 949-595-4800. FAX: 949-595-4801. www.knightequip.co

						in a gall bio bio
	Atlanta Branch: 415 Gees Mill Business	Toronto Branch: 2880 Argentia Road, Unit 6	London Branch: #15 Brunel Centre	Sydney Branch: Unit 28, 317-321	Amsterdam Branch: Marssteden 68	Spain Branch: Port Ginesta, Local 210
	Court NE, Suite 200	Mississauga, Ontario	Newton Road, Crawley	Woodpark Rd., Smithfield	7547 TD Enschede	08860 Sitges
	Conyers, GA 30013 USA	L5N 7X8 Canada	West Sussex UK RH10 9TU	NSW Australia 2164	The Netherlands	Barcelona Spain
	TEL: 770-760-8777	TEL: 905-542-2333	TEL: 44-1293-615570	TEL: 61-29-725-2588	TEL: 31-53-428-58-00	TEL: 34-936-342-130
	FAX: 770-761-0199	FAX: 905-542-1536	FAX: 44-1293-615585	FAX: 61-29-725-2025	FAX: 31-53-428-58-09	FAX: 34-936-643-477