
KNIGHT

IDEX

IDEX CORPORATION



ILCS Version 2.1 System Programming Manual

TABLE OF CONTENTS

Menu Map.....	3
Control Panel Diagram	4
Introduction.....	5
Access Codes.....	5
Memory Functions	6
Setup Routines.....	9
Report Setup Routines	11
Maintenance Schedule	15
Programming Routines.....	16
Operation.....	18
Warranty Information	20
Knight Locations	20



CAUTION: Wear protective clothing and eyewear when dispensing chemicals or other materials. Observe safety handling instructions (MSDS) of chemical mfrs.



CAUTION: To avoid severe or fatal shock, always disconnect main power when servicing the unit.



CAUTION: When installing any equipment, ensure that all national and local safety, electrical, and plumbing codes are met.

MENU MAP

1 *** DISPENSER *** MEMORY FUNCTIONS

- Clear pump volumes
- Clear sum/cycle report
- Clear batch count
- Load factory defaults
- Set external memory module ID
- Clear external memory module

2 *** DISPENSER *** SETUP ROUTINES

- Change dispenser ID #
- Change main access code
- Set date and time
- Set unit of measure
- Set flush time and sampling delay
- Set simultaneous pump operation
- Set number of users

3 *** DISPENSER *** REPORT SETUP ROUTINES

- Change user access code
- Change user password
- Change formula access
- Change report name
- Change chemical names and costs
- Change formula names
- Set shift times
- Set operating zone


4 *** DISPENSER *** MAINTENANCE SCHEDULE

- Date dispenser installed
- Date squeeze tube last changed
- Date squeeze tube last lubed

5 *** DISPENSER *** PROGRAMMING ROUTINES

- Prime pumps
- Calibrate pumps
- Manually enter pump flow rates
- Program formulas

ILCS CONTROLLER DIAGRAM

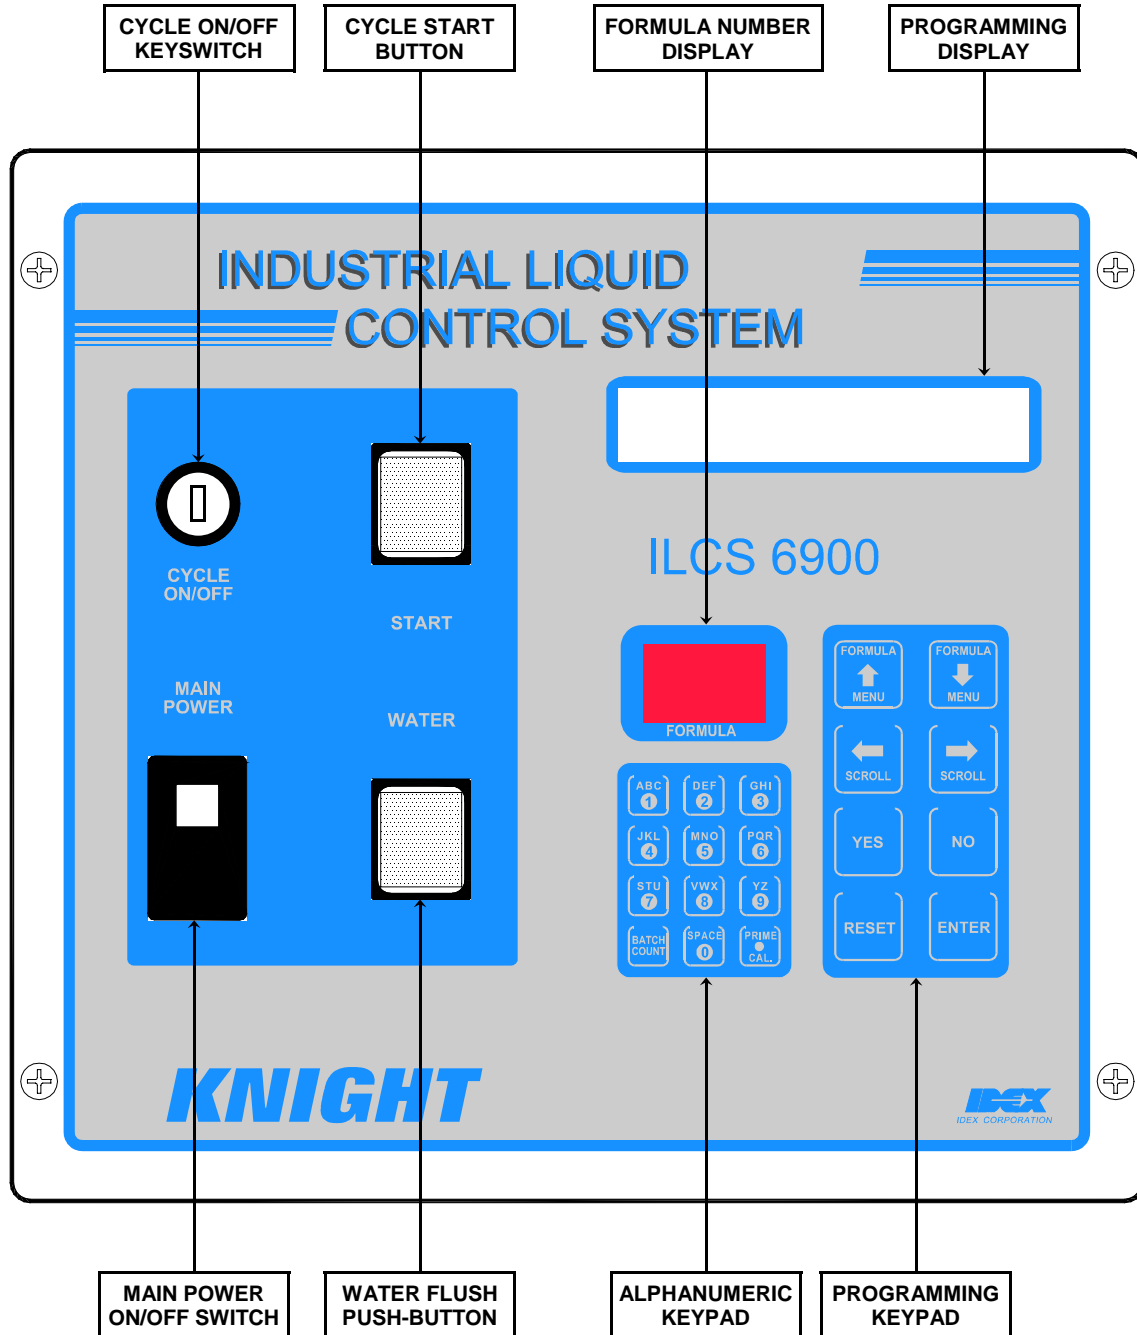

MOVING THROUGH THE MENUS

ILCS programming is done through the use of menu selections. Any menu can be entered by pressing the ENTER button, or exited by pressing RESET (or in some cases MENU ↓ or ↑). Its that simple! Each of the main menu headings give an idea of what information can be found, entered, or changed. Within each main menu selection are several screen “prompts” that walk you through the complete programming process step-by-step.

Below is an example of the main display when you are not in the programming menus. The main display is more commonly referred to as the *default display*, and appears when the system is in normal operating mode.

FORMULA 01 DATE 05/11 TIME 14:32:54	<p>The default display shows the present formula name on the top line. The bottom line of the display will alternate between date/time and the message ENTER USER PASSWORD.</p> <p>The “user password” should not be confused with systems access code. User passwords allow multiple persons to operate the system for dispensing chemicals, whereas the access code allows entry into the menus for programming.</p> <p>From the default display, you must enter the main access code (following) to begin programming.</p>
---	---

ACCESS CODES

The ILCS system has two access codes for protection:

- The "main" access code, allows entry into ALL of the menus and functions of the system.
- The "user" access code allows printing reports with WinReporter PC software, without the ability of changing programmed information.

Systems are shipped from the factory with both access codes set to zero. Only a person with the "main" access code can change the "user" access code. (changing codes is explained later in this manual). If desired the two access codes can be the same, however the user will then have access to ALL of the functions of the system, including the ability of changing programmed information.

TO PROGRAM DISPENSER PRESS “ENTER” ...

ENTER ACCESS CODE THEN PRESS ENTER	<p>From the default display shown above, press the ENTER button. The screen at left should appear. If the screen at left does not appear, wait 2 seconds, press RESET, then press ENTER.</p> <p>When you see the screen at left, type in the access code and press ENTER. Remember, for a new system, the access code will be zero (until you change it later).</p> <p>Follow the programming steps for each section, starting on the next page.</p>
---	--


IMPORTANT NOTES:

- Leading zeroes on main access code, user access code, and user passwords, are not required to be entered. For example, a user password of “010” can be typed in as “10”, then press ENTER.
- Its recommended to clear pump volumes, sum/cycle report, and batch count, then loading factory defaults prior to initial programming of formulas. See MEMORY FUNCTIONS [menu 1] for details.
- If at any time you get lost in the programming and are not sure what to do, press the RESET button until the section menu heading appears, then proceed.

1

*** DISPENSER *** MEMORY FUNCTIONS

- Clear pump volumes
- Clear sum/cycle report
- Clear batch count
- Load factory defaults
- Set external memory module ID
- Clear external memory module

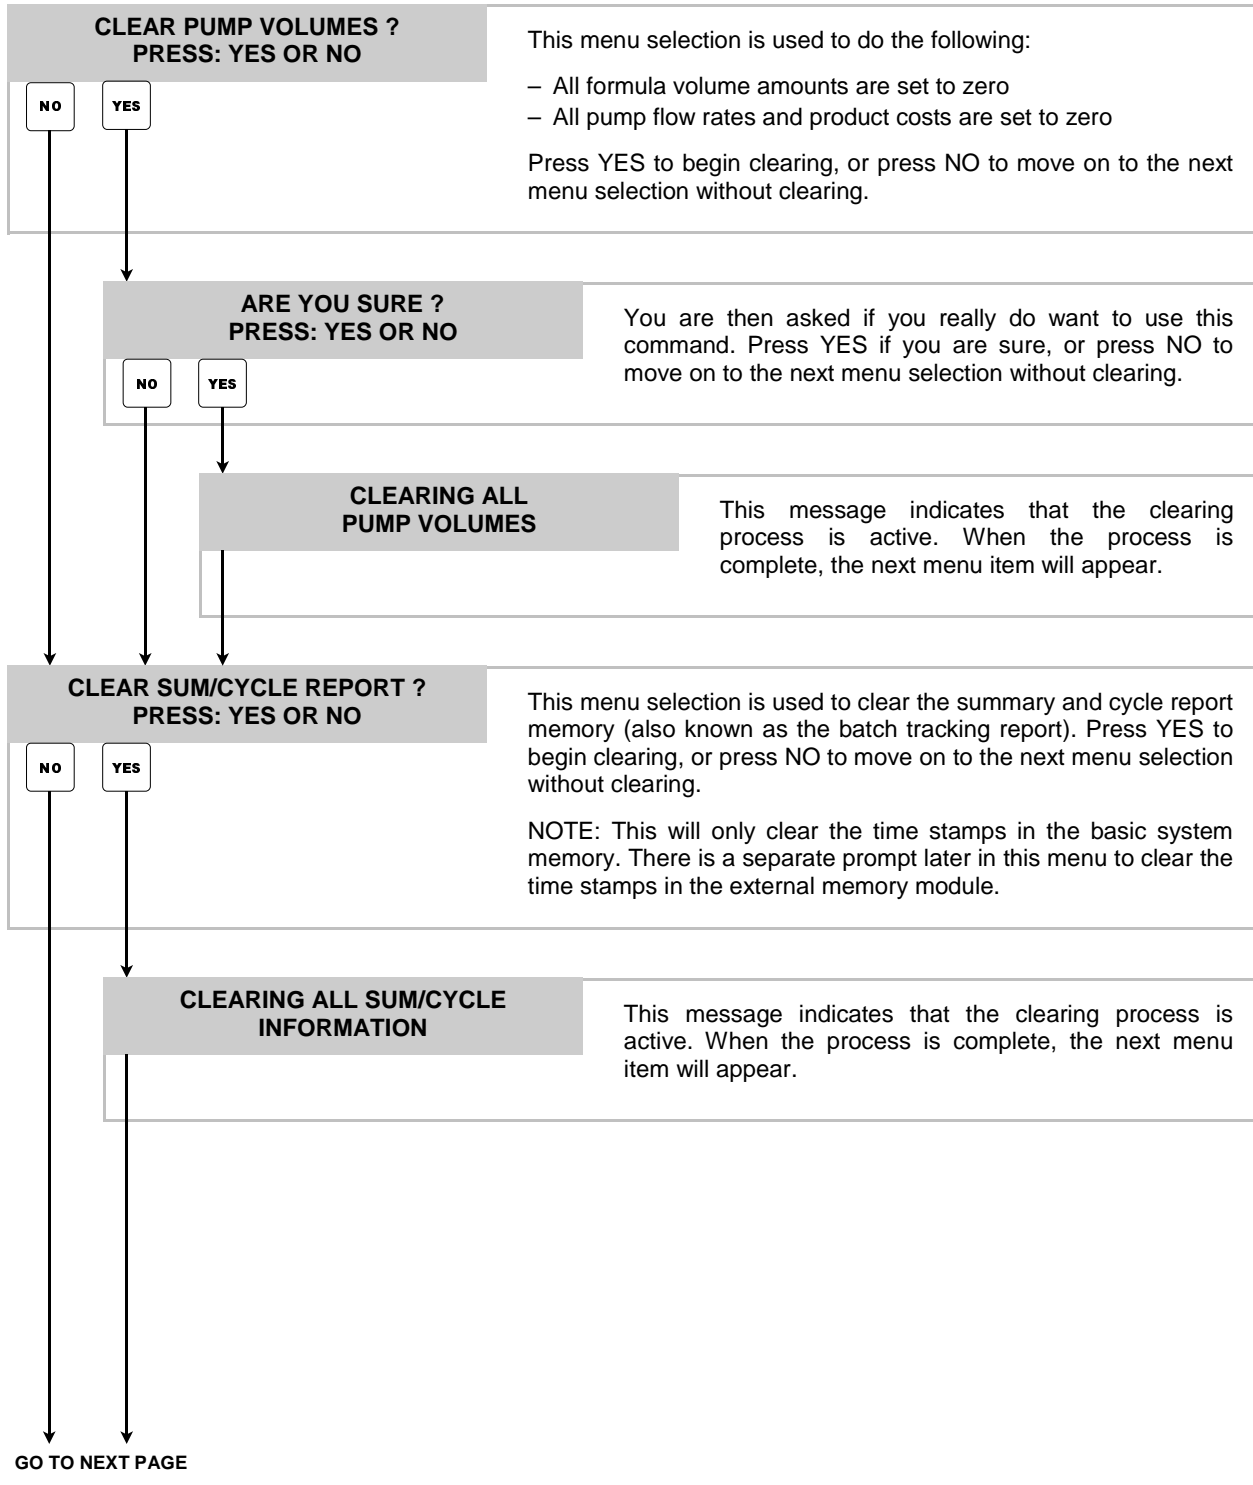

1

*** DISPENSER ***
MEMORY FUNCTIONS

• Continued

**CLEAR BATCH COUNT ?
PRESS: YES OR NO**

NO

YES

This menu selection is used to zero out the batch count (this is the digital counter that appears on the screen when pressing the BATCH COUNT button on the control panel). Press YES to begin clearing, or press NO to move on to the next menu selection without clearing.

CLEARING BATCH COUNT

This message indicates that the clearing process is active. When the process is complete, the next menu item will appear.

**LOAD FACTORY DEFAULTS ?
PRESS: YES OR NO**

NO

YES

This menu selection is used to load factory default settings:

- Unit of measure is set to US
- Flush time is set to 10 seconds / drain after set to 2 seconds
- Simultaneous pump setting is turned OFF
- All user passwords are set to zero / user names are reset
- Formula access is set to enable for all users on all formulas
- Report name is cleared (blanked out)
- Chemical names and formula names are reset
- Shift start times are reset: 1 = 06:00 / 2 = 11:00 / 3 = 17:00
- Operating zone is set for 00:00 to 24:00
- Maintenance schedule dates are set to zero

Press YES to begin loading factory defaults (also known as "clearing the setup") or press NO to move on to the next menu selection without loading factory defaults.

**ARE YOU SURE ?
PRESS: YES OR NO**

NO

YES

You are then asked if you really do want to use this command. Press YES if you are sure, or press NO to move on to the next menu selection without loading.

**CLEARING SETUP
*** PLEASE STAND BY *****


This message indicates that the clearing process is active (factory defaults are being loaded at this point). When the process is complete, the next menu item will appear.

GO TO NEXT PAGE

1

*** DISPENSER MEMORY FUNCTIONS ***


• Continued

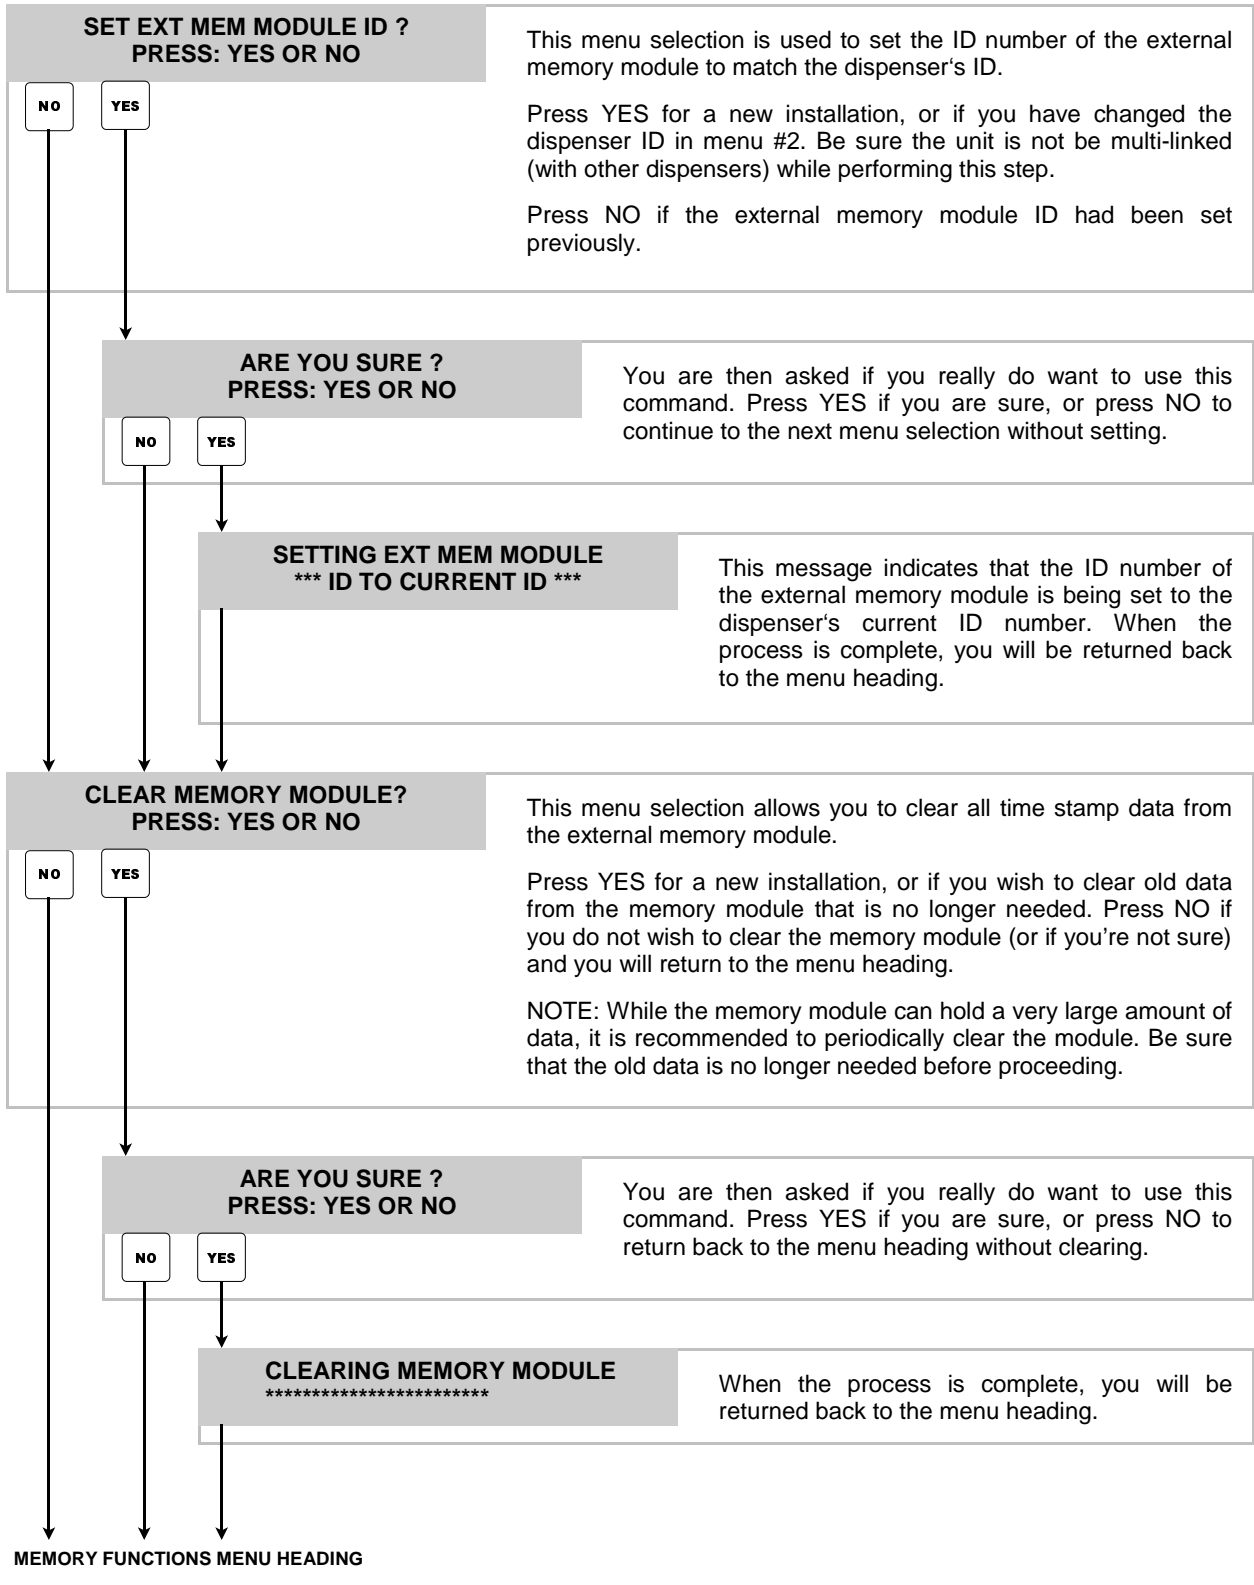

2

*** DISPENSER SETUP ROUTINES ***

- Change dispenser ID #
- Change main access code
- Set date and time
- Set unit of measure
- Set flush time and sampling delay
- Set simultaneous pump operation
- Set number of users

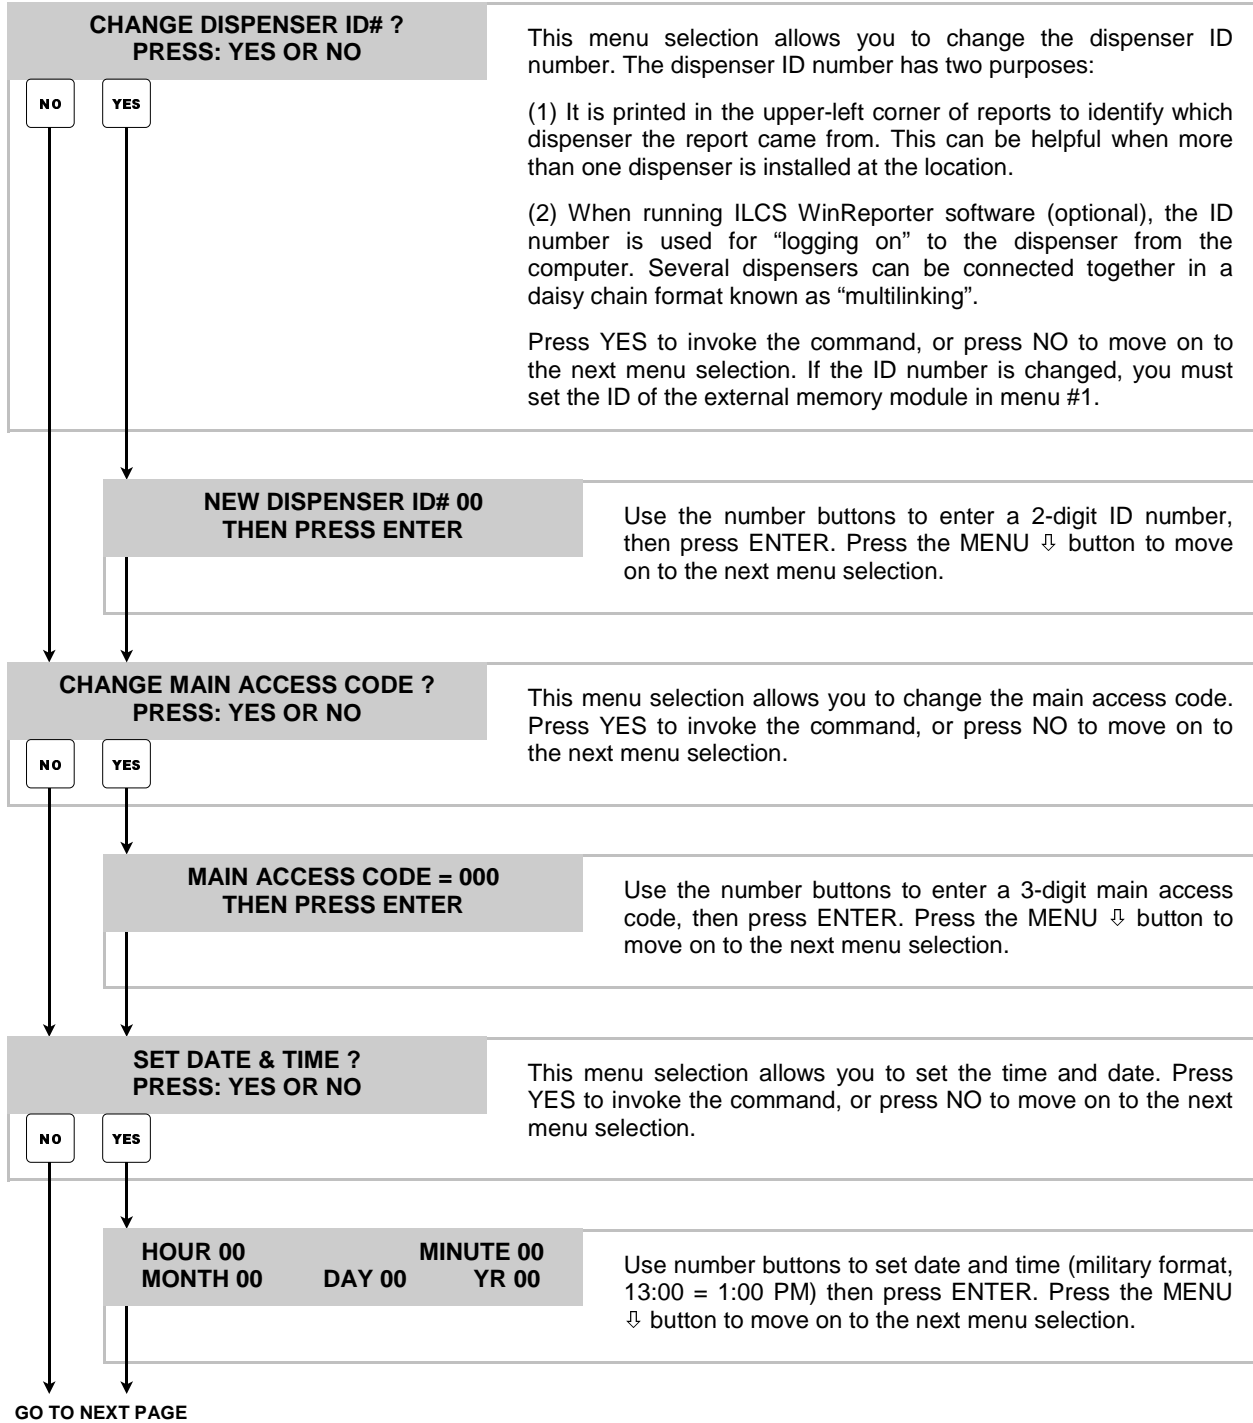

UNIT OF MEASURE = US
1=US 2=METRIC 3=IMPERIAL

This menu selection allows you to change the unit of measure. Use the number buttons to choose the desired unit of measure. Press the MENU ↓ button to continue.

FLUSH TIME 10 SEC
TO DRAIN AFTER 02 SEC

Disregard this menu for systems without flush manifold.

This menu selection allows you to set flush time (how long the flush solenoid is on after chemical injection) and “to drain after” time (the delay before the optional 3-way valve is activated). These settings let you setup the system to meet your particular requirements. Use the number buttons to set the times and, then press ENTER. Press the MENU ↓ button to continue.

Flush: Default is 10 seconds / minimum is 2 seconds.

To Drain After: Default is 2 seconds / minimum is 2 seconds.

SIMULTANEOUS PUMPS = OFF
1=OFF 2=ON

This menu selection allows you to choose if you want all pumps in a formula to run at the same time. When this selection is off, all pumps in the formula will run in sequence from left to right (lowest number to highest). Use the number buttons to make your selection. Press the MENU ↓ button to continue.

FLUSH ERROR SAMPLING
DELAY = 00 SECONDS

Disregard this menu for systems without flush manifold.

This menu selection allows you to set the amount of time that the optional flow sensor switch can “break” contact before giving a flush error. Use the number buttons to set the sampling time and, then press ENTER. Leave the setting at 00 if a flow switch is not used (typical). Press the MENU ↓ button to continue.

NUMBER OF USERS = 400
1=400 2=50

This menu selection allows you to choose the total number of users you want to program into the system. The formula access settings will differ based on this setting. See notes below.

- **400 Users:** Formula access settings for each user can be programmed as either enable (on) or disable (off).
- **50 Users:** Formula access settings for each user can be programmed as a total number of batches allowed per shift. The selectable range is 0 - 99 batches.


Use the number buttons to make your selection. Press the MENU ↓ button to return back to the menu heading. If you change this setting on an existing (programmed) system, you will need to use menu #3 to set user names, user passwords, and access settings.

SETUP ROUTINES MENU HEADING

3

*** DISPENSER *** REPORT SETUP ROUTINES

- Change user access code
- Change user password
- Change formula access
- Change report name
- Change chemical names and costs
- Change formula names
- Set shift times
- Set operating zone

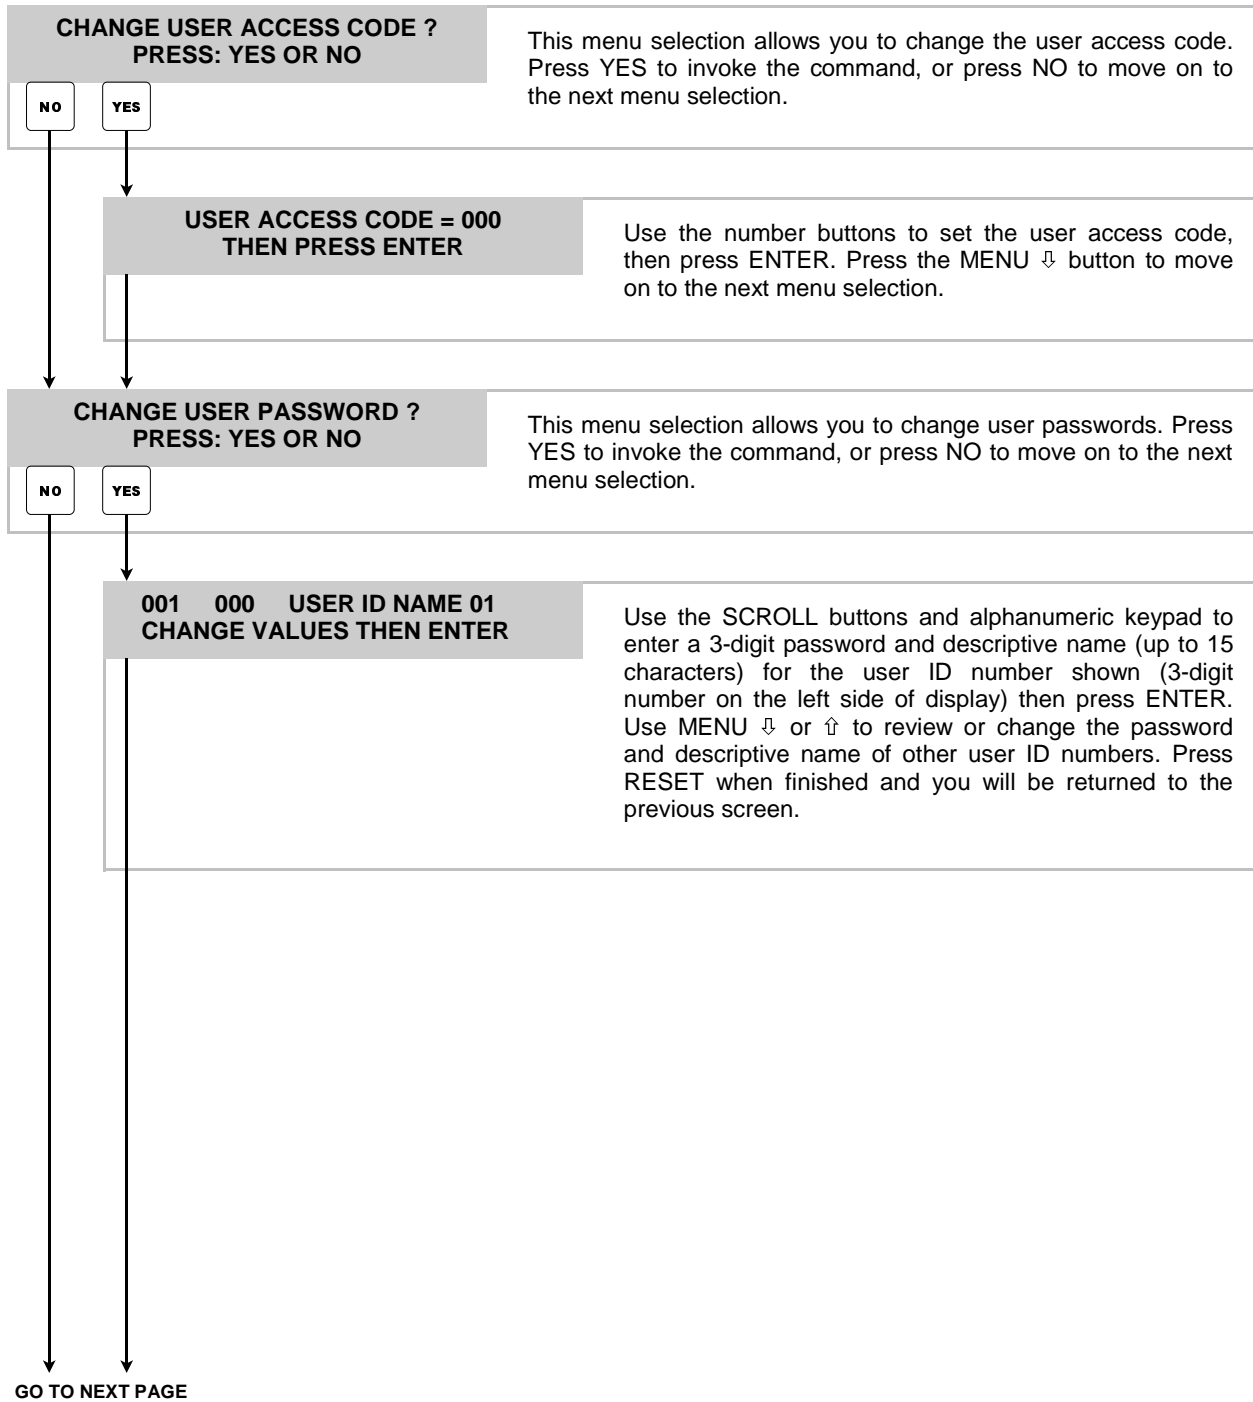

CHANGE FORMULA ACCESS ?
PRESS: YES OR NO

NO

YES

This menu selection allows you to restrict the users access to specific formulas. How you program formula access is based on the "number of users" setting (400 or 50) in menu #2. Press YES to change or press NO to move on to the next menu selection.

001 FORM-01 02 03 04
USERID NAME 1 1 1 1

...if you selected 400 users (in menu #2)

TO CHANGE: Type in the user ID number and press ENTER. Then use the SCROLL buttons to move to the cursor below the formula you wish to change. Choose 1 (allowed) or 0 (not allowed) for each formula shown (note: the PRIME/CAL button will change all formulas shown to 0) and press ENTER. When ENTER is pressed, you are only changing the formula number "set" that is shown on the display. To change other formulas, use MENU ↓ or ↑ then make your changes to the formula set shown and press ENTER again. See details below regarding the information shown on the window.

Top line: The first three digits are the user ID number (001 - 400). The next set of double digits represent the formula numbers.

Bottom line: The first thirteen characters indicate the user's descriptive name. The numbers directly below the formula numbers show which formulas this user can access. 1 means the formula is allowed, 0 means the formula is not allowed.

TO VIEW: Type in the user ID number and press ENTER. The screen will display current settings for each formula. Use MENU ↓ or ↑ to choose other formula numbers.

Press RESET when finished and you will be returned to the previous screen.

01 FORM-01 02 03 04 05
USERID 99 99 99 99 99

...if you selected 50 users (in menu #2)

TO CHANGE: Type in the user number and press ENTER. Then use the SCROLL buttons to move to the cursor below the formula you wish to change. Type in the desired numbers for each formula shown (the PRIME/CAL button will change all formulas shown to 00) and press ENTER. When ENTER is pressed, you are only changing the formula number "set" that is shown on the display. To change other formulas, use MENU ↓ or ↑ then make your changes to the formula set shown and press ENTER again. The following paragraphs explain the information shown on the window.

Top line: The first two digits are the user ID number (01 - 50). The next set of double digits represent the formula numbers.

Bottom line: The first eight characters indicate the user's descriptive name. The numbers directly below the formula numbers show how many batches (0 - 99) for each corresponding formula that this user can dispense per shift.

TO VIEW: Type in the user ID number and press ENTER. The screen will display current settings for each formula. Use MENU ↓ or ↑ to choose other formula numbers.


Press RESET when finished and you will be returned to the previous screen.

GO TO NEXT PAGE

3

***** DISPENSER ***
REPORT SETUP ROUTINES**

• Continued

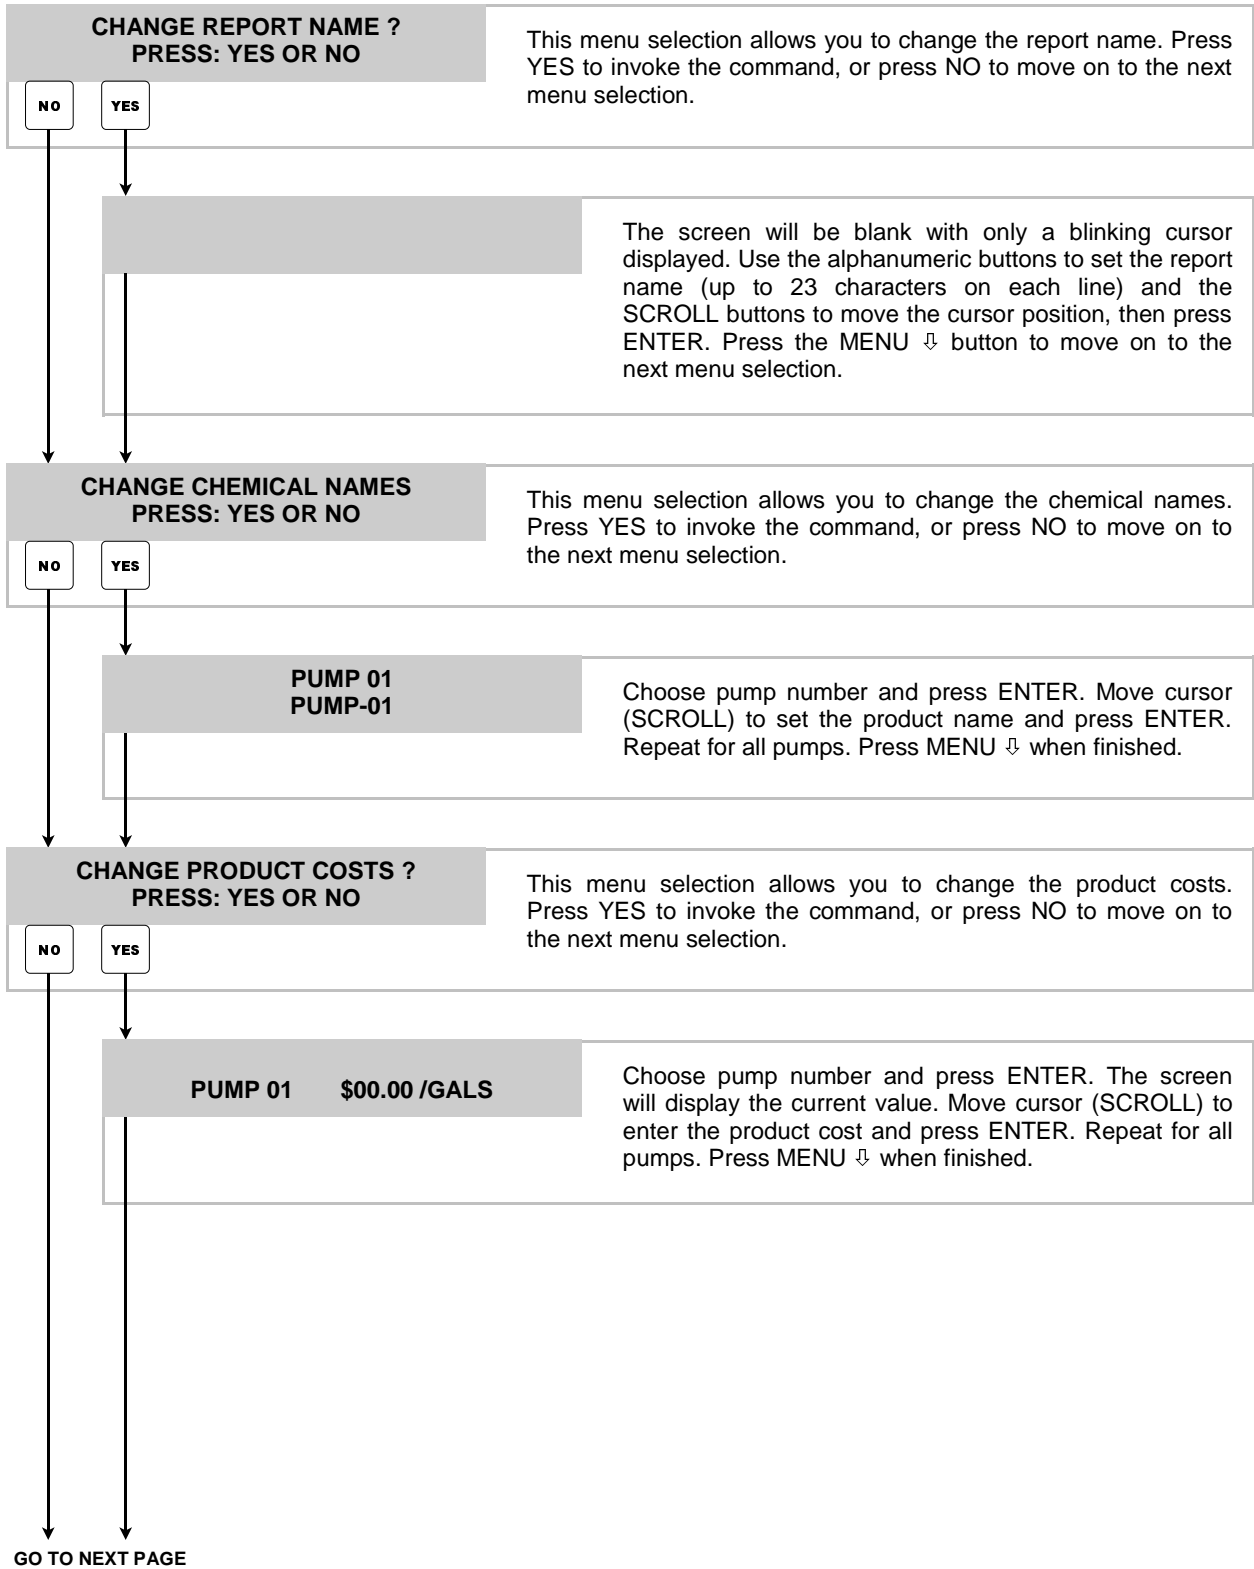

3

*** DISPENSER *** REPORT SETUP ROUTINES

• Continued

CHANGE FORMULA NAMES ? PRESS: YES OR NO

This menu selection allows you to change formula names. Press YES to invoke the command, or press NO to move on to the next menu selection.

NO

YES

FORMULA 01 FORMULA 01

Choose the formula number on the top line and press ENTER. The current formula name will appear on the bottom line. Move the cursor to the bottom line (SCROLL) and use alphanumeric buttons to enter the formula name, then press ENTER. Repeat for all formulas. Press MENU ↓ when finished.

WANT TO SET SHIFT TIMES ? PRESS: YES OR NO

This menu selection allows you to enter shift times. Press YES to invoke the command, or press NO to move on to the next menu selection.

NO

YES

START TIMES #1 06:00 #2 11:00 #3 17:00

Use the number buttons to enter the shift start times, then press ENTER. Time must be in military format (i.e. 13:00 = 1:00 PM) Press the MENU ↓ button to move on to the next menu selection.

SET OPERATING ZONE ? PRESS: YES OR NO

This menu selection allows you to set the operating zone. The operating zone is the time range in which formulas can be access to dispense. Formulas cannot be access to dispense during any time outside the operating zone. Press YES to invoke the command, or press NO to move on to the next menu selection.

NO

YES

START TIME 00:00 END TIME 24:00

Use the number buttons to set the start and end times of the operating zone, then press ENTER. Time must be in military format (i.e. 13:00 = 1:00 PM) Press the MENU ↓ button to move on to the next menu.

REPORT SETUP ROUTINES MENU HEADING

4***** DISPENSER ***
MAINTENANCE SCHEDULE**

- Date dispenser installed
- Date squeeze tube last changed
- Date squeeze tube last lubed

**DISPENSER INSTALLED
00/00/00**

This menu selection allows you to set the installation date. Use the number buttons to set the date, then press ENTER. Press the MENU ↵ button to move on to the next menu selection.

**SQUEEZE TUBES CHANGED
PUMP 01 00/00/00**

This menu selection allows you to set the date that the squeeze tubes were last changed. Use the number buttons to set the date, then press ENTER. Do this for each pump in the system. Press the MENU ↵ button to move on to the next menu selection.

**SQUEEZE TUBES LAST LUBED
PUMP 01 00/00/00**


This menu selection allows you to set the date that the squeeze tubes were last lubed. Use the number buttons to set the date, then press ENTER. Do this for each pump in the system. Press the MENU ↵ button to move on to the next menu selection.

MAINTENANCE SCHEDULE MENU HEADING

5


*** DISPENSER *** PROGRAMMING ROUTINES

- Prime pumps
- Calibrate pumps
- Manually enter pump flow rates
- Program formulas

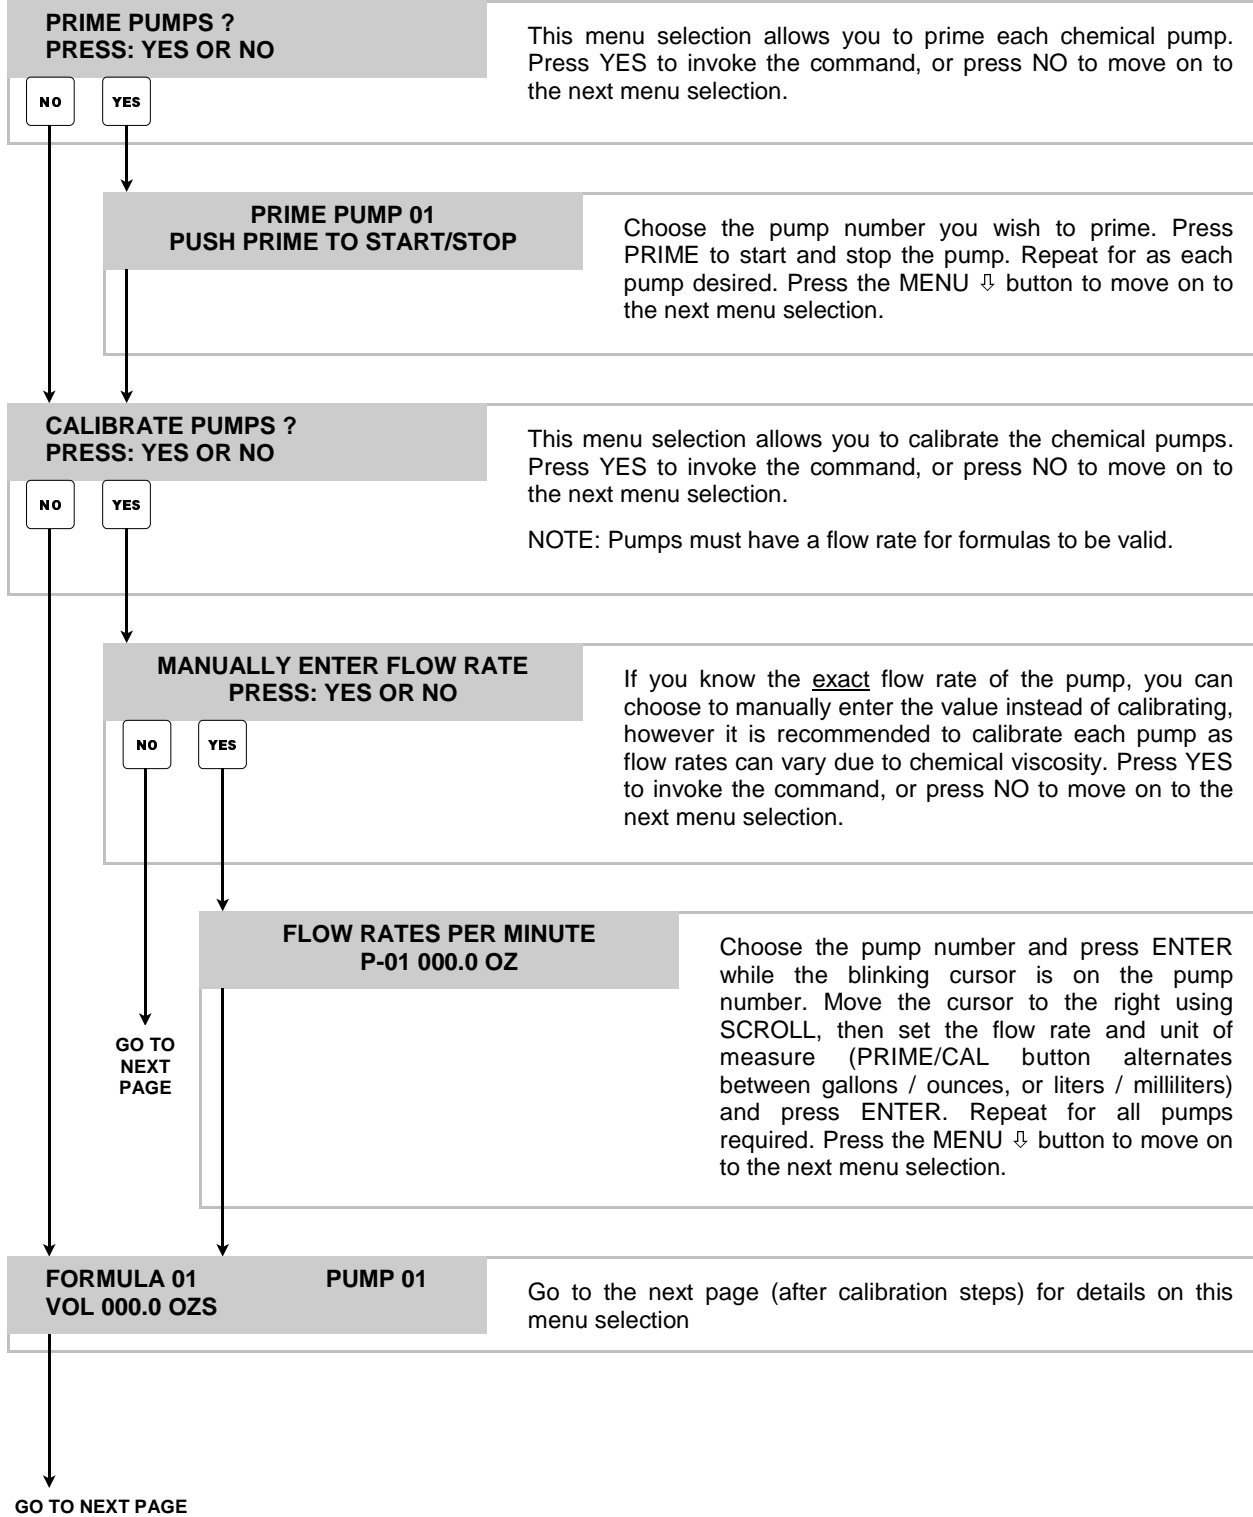

5***** DISPENSER ***
PROGRAMMING ROUTINES**

• Continued

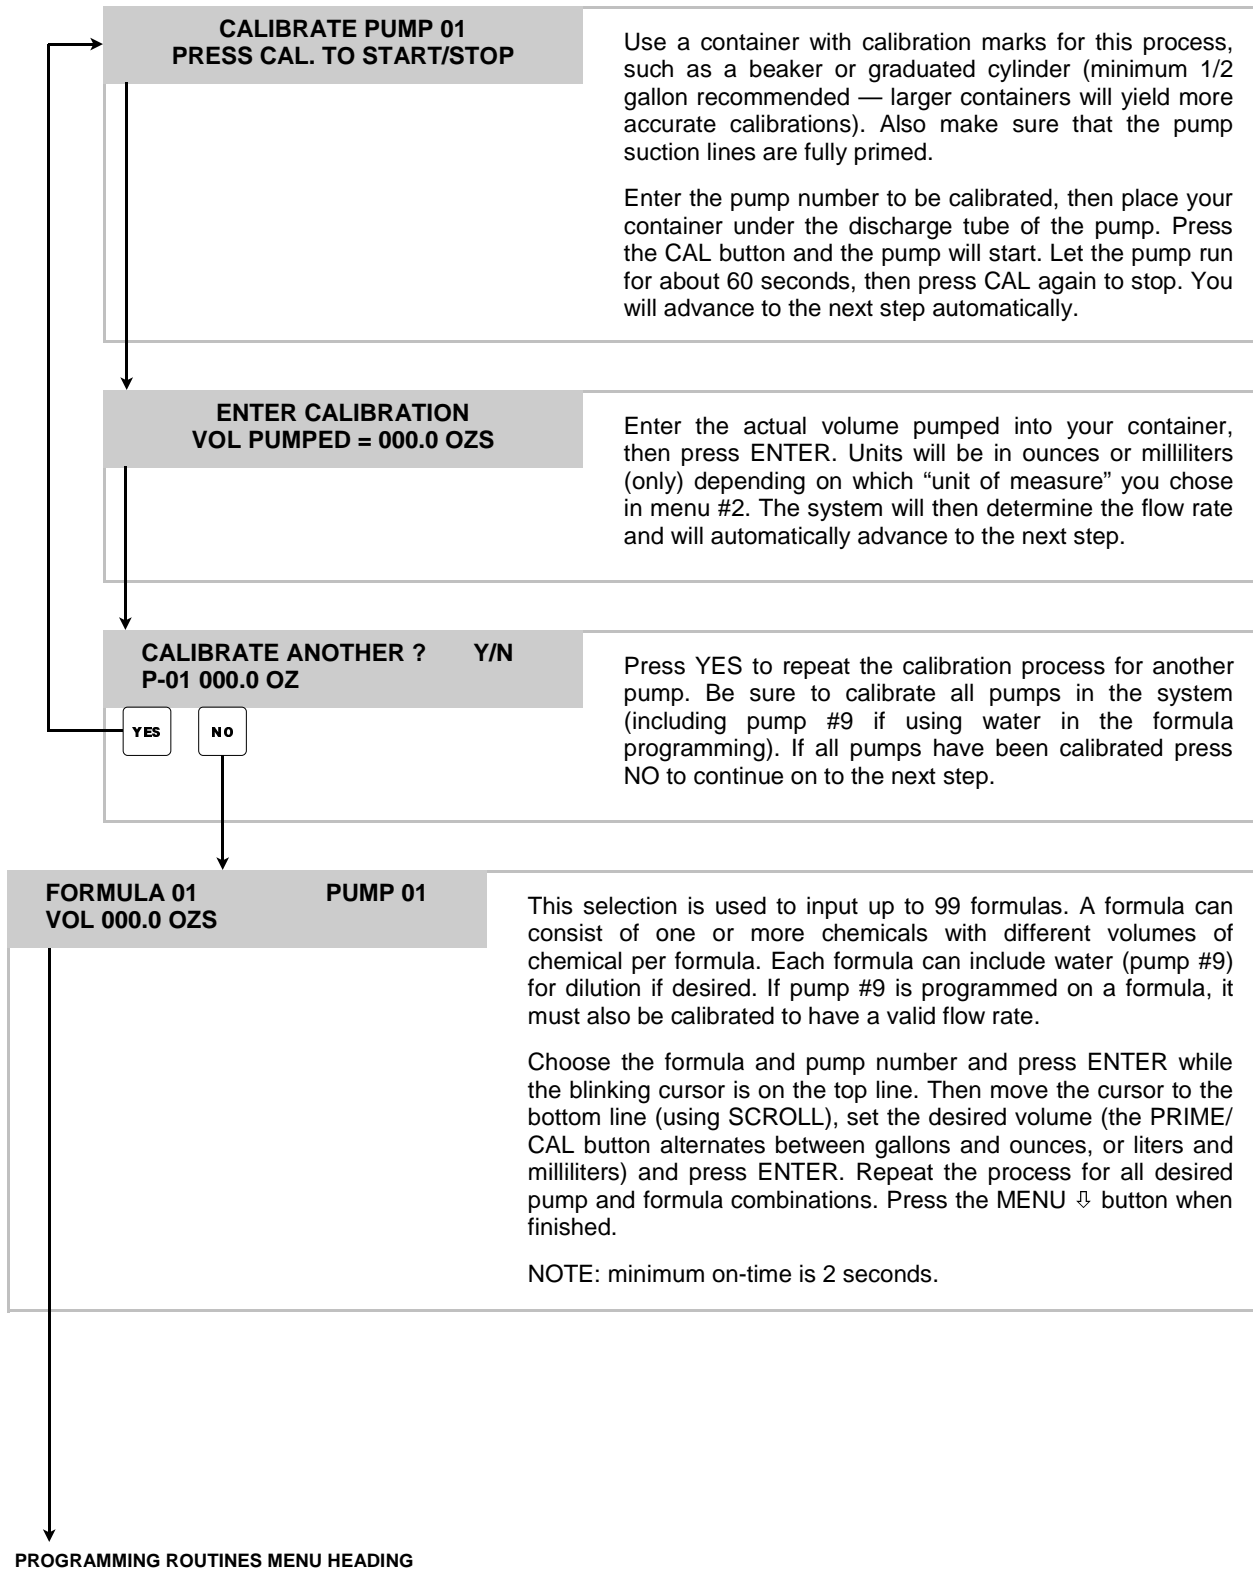

OPERATION

When all system programming is complete, you will be ready for operation. Check that all chemical lines are primed and that the water source is turned on if using a flush manifold.

- (1) Press Main Power switch to ON position.
- (2) Insert the key and turn to the right.
- (3) Place container under the discharge spout.
- (4) Type in your user password and press ENTER — if your password was accepted, the display will flash a brief acknowledgement and you will then see the following.

FORMULA 01 SELECT FORMULA/HIT START

- The top line will show the current formula name.
- The bottom line will alternate between the date/time and the display shown to the left.

Use \uparrow/\downarrow to choose the desired formula, then press **START**. If the message "ACCESS RESTRICTED" appears, it indicates that the current user is not allowed to dispense the formula selected. Otherwise, the unit will operate as follows.

- Chemicals will begin pumping, starting with the lowest number pump to the highest number (if there is more than one chemical programmed in the formula).
- If simultaneous pumps option is turned ON, then all pumps on the formula will run together (if there is more than one chemical programmed in the formula).
- The display will count down the remaining time left to pump.
- When pumps are finished, the flush will activate for its programmed time, and the 3-way valve (if used) will activate after the time set to drain after.
- If the RESET button is pressed during operation, you will then see the following message.

ABORT CURRENT BATCH? PRESS: YES OR NO

- If you press NO, the system will finish the batch as normal.
- If you press YES, you will then see the following.

FLUSH SYSTEM? PRESS: YES OR NO

Choose if you want to flush the system from any remaining chemical. The pumps will not run during this function.

When finished, the system will return to the default display and will record the *actual* amount dispensed (instead of the *programmed* amount) in the batch tracking memory.

NOTES

DISCLAIMER

Knight LLC does not accept responsibility for the mishandling, misuse, or non-performance of the described items when used for purposes other than those specified in the instructions. For hazardous materials information consult label, MSDS, or Knight LLC. Knight products are not for use in potentially explosive environments. Any use of our equipment in such an environment is at the risk of the user, Knight does not accept any liability in such circumstances.

WARRANTY

All Knight controls and pump systems are warranted against defects in material and workmanship for a period of ONE year. All electronic control boards have a TWO year warranty. Warranty applies only to the replacement or repair of such parts when returned to factory with a Knight Return Authorization (KRA) number, freight prepaid, and found to be defective upon factory authorized inspection. Bearings and pump seals or rubber and synthetic rubber parts such as "O" rings, diaphragms, squeeze tubing, and gaskets are considered expendable and are not covered under warranty. Warranty does not cover liability resulting from performance of this equipment nor the labor to replace this equipment. Product abuse or misuse voids warranty.

KNIGHT LLC, A Unit of IDEX Corporation

World Headquarters
20531 Crescent Bay Drive
Lake Forest, CA 92630
Tel: 949.595.4800
Fax: 949.595.4801
www.knightequip.com

USA Toll Free
Tel: 800.854.3764
Fax: 800.752.9518
Canada
Tel: 905.542.2333
Fax: 905.542.1536

Australia
Tel: 61.2.9725.2588
Fax: 61.2.9725.2025
UK
Tel: 44.1293.615.570
Fax: 44.1293.615.585

North Europe
Tel: 31.53.428.5800
Fax: 31.53.428.5809
South Europe
Tel: 34.93.487.1015
Fax: 34.93.215.2019

North Asia Pacific
Tel: 82.2.3481.6683
Fax: 82.2.3482.5742
Southeast Asia
Tel: 65.9170.0984
Fax: 65.6489.6723